

O885 - Smart TV box H96 MAX RK3318 4GB Ram, 64GB ROM

Instructions for use

Dear Customers,

Thank you for your trust and for purchasing this product. This instruction manual is included with the product. It contains important instructions for commissioning and operating the product. If you pass the product on to other persons, make sure that you also give them this manual. Keep this manual so that you can read it again at any time!

Smart TV box

Precautions before use

To prevent fire, electric shock and product damage, do not allow the player to come into contact with rain, moisture or liquid. Do not place vases or other water containers on the player.

To ensure good ventilation, do not place the player in bookcases, cabinets or other enclosed areas. Keep it well ventilated to prevent fire or electric shock caused by overheating the player. Keep lighted candles and other lighted objects away from the player. Do not open the player case. This should only be done by a specialist.

Location of emission units

Place the player on a flat surface. Protect it from sunlight and avoid heat, moisture and frequent shocks to avoid damaging the case and other player components and shortening the life of the player. For best player performance, do not place heavy objects on the player. and keep it at least 6 inches from the wall.

Power problems

Do not use surge voltage, otherwise the player will be damaged and could cause a fire. Connect the power cord correctly and make sure the cord is not damaged. If you do not use the player for a long time, disconnect the power cord to prevent damage caused by a sudden electrical impulse.

Moisture problems

Keep the player out of damp places, such as the basement.

Moisture condensation can cause damage to the player. In this case, turn on the player and the heat of the player can dissipate the moisture.

About the User Guide

Read the user manual carefully and keep it in a safe place for inspection. The images in this User Guide may differ from the images shown on the TV due to differences in firmware. If any of the components need to be replaced, make sure that only approved components are used. Otherwise, it may cause fire, electric shock or other damage.

TV control area: press the button to learn how to control the TV using the TV remote control.



 Power: Press to enter standby mode.  Mute: Press to mute the volume.

 Web: press to go to the browser.

 VOL: Press the button to increase/decrease the volume.

 Home: Quick button to return to the main menu

-  Return: Press to return to the previous menu.
-  Turn it down: Press to select the function menu of the corresponding application in the video, music, photo and web page.
-  Cursor: Press the button to use the navigation button as a cursor.

Navigation: Press to scroll left/right/up/down. Press OK to confirm your choice.



-  Numeric keypad 0-9: Press to enter an Arabic number.
-  Turn it down: Mute voice or reactivate Backspace:
-  Press to type back a space.

Connection:


AV connection

- A. Connect the 3-color AV cable (red/white/yellow) to the AV output interface of the TV BOX, the other end to the AV input interface of the TV. Connect the device according to the colour scheme below.
- b. Turn on the TV BOX, set the TV video mode to AV input.

HDTV Connection

- A. Connect the HDTV cable to the product interface and the other side to the TV.
- b. turn on the TV BOX, set the TV video mode to the corresponding HDTV

input. Connection diagram:

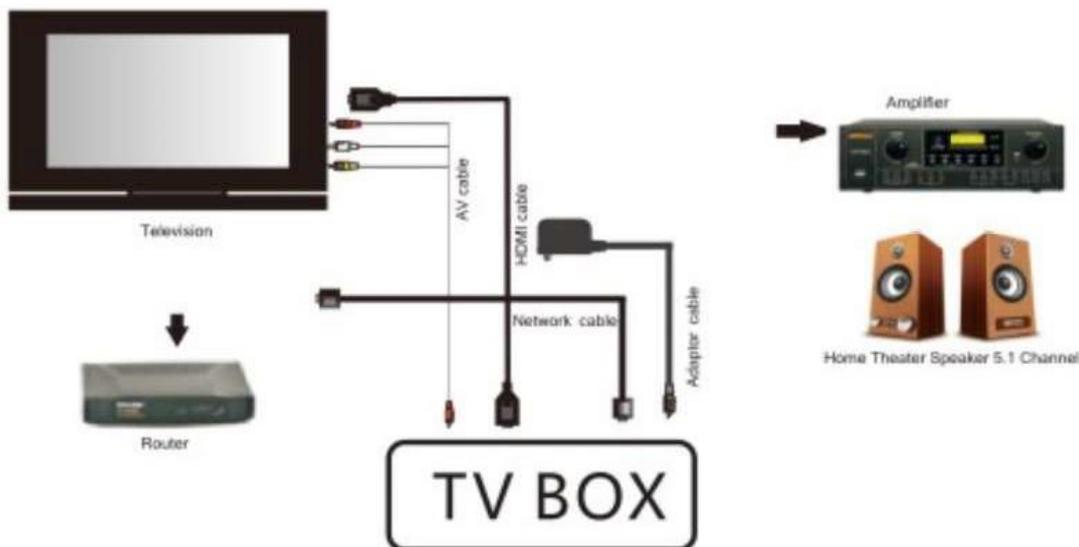

Launch:

When the power is turned on, the blue light turns on for about 3 seconds and enters the main interface




Screen settings:

Click "Setting/Display/Display Scale", scroll to the page below and press the up or down button on the remote control to adjust the screen.



Wi-Fi settings

Go to "Wi-Fi" and turn on the Wi-Fi network in the top right corner. The system will automatically start searching for available Wi-Fi networks around you.

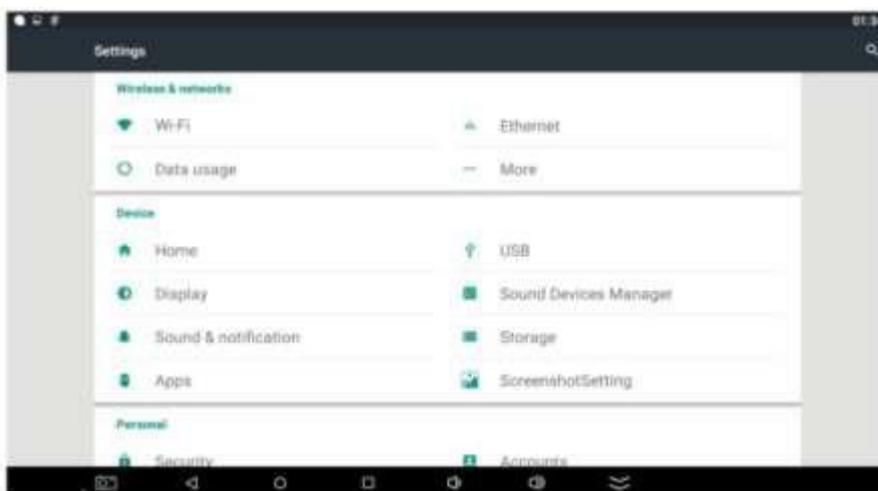

HDTV Output Settings

Display -> Turn on "HDTV auto-detection" -> Click on "HDTV Output Mode setting :1080-60hz". Then you can select it as the second screen.




Application installation

Go to the application installer.

Use this feature of the application installer to install software. First, download the desired software using the application formats from your computer to the USB. Select the desired device to scan the applications. Press the OK button to install the required software.

When the installation is complete, a software icon will appear in the application menu.

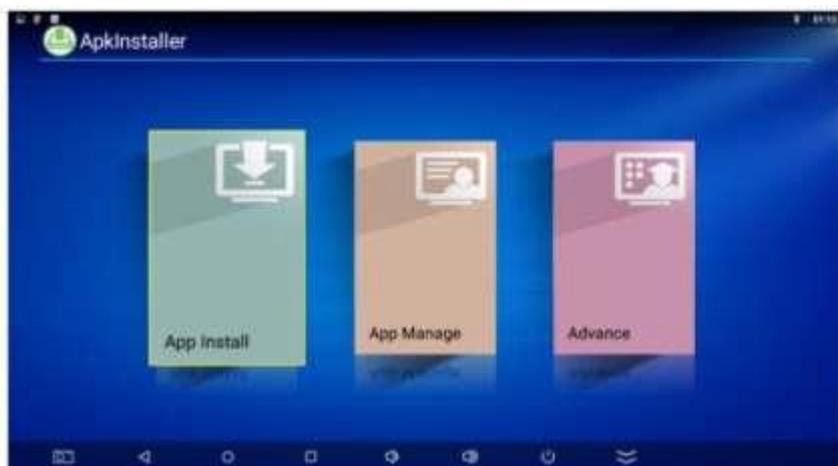

My apps

Move to my apps. Press OK to enter. In the picture you can see icons referring to different functions



Backup & reset

Go to "Backup and Reset" and press to restore data to factory settings. You can delete all data in the media box this way.



Troubleshooting

Warning

Under no circumstances attempt to repair the TV BOX yourself as this will void the warranty. Do not open as there is a risk of electric shock. If a fault occurs, check the points below first before repairing the TV BOX. If you cannot solve the problem using the following advice, ask your dealer or a person authorised to repair similar equipment for help.

The Problem	Solution
No power	Check that the power adapter is properly connected to the power supply and the TV box. Press the button Turn on the power on the remote control.
No view	Reconnect the HDTV or YIJV cable or AV cable. Make sure the TV is switched on.
No or distorted sound	Edit by volume. Make sure whether the speakers are connected her correctly.
No audio or digital output	Check the digital connection. Check that the your amplifier is set up correctly.
The player does not respond to the remote control. The player does not respond to some operational commands during playback	Point the remote control directly at the sensor on the front of the TV box. Reduce the distance to the TV box. Replace the batteries in the remote control. Operation may not be enabled. Refer to the user manual. To stop the system, reinsert the power adapter and restart.
No sound during movie playback	The audio codec may not be supported by TV BOX. In the playback menu, you can change the supported Sound. Check the volume.
The contents of the USB Flash drive cannot be read	The USB flash drive format is not compatible with the TV box. If no file can be read from the USB, turn off the TV BOX for 30 seconds and restart the TV BOX.
Slow operation of the USB Flash drive	A large file size or high resolution USB flash drive takes a long time to read can be read and displayed on the TV screen.

NO sound With HDTV connection	Check the connection between the TV and the HDTV connector Of Box. Check your TV system settings. Check the volume.
Television player is empty a light screen flashes	Turn off the TV BOX. Wait 30 seconds and turn it on again. If in HDTV status, check that the HDTV connection is correct or change another cable
	HDTV, set up output resolution of this TV BOX to 720p.

Maintenance and cleaning:

The product requires no maintenance. Use only a soft cloth slightly dampened with water to clean the case. Do not use any scouring agents or chemical solvents (paint and varnish thinners) as these may damage the product housing.

Recycling:

Electronic and electrical products must not be thrown into household waste. Dispose of waste at the end of the product's lifetime appropriately according to the applicable legal provisions. Save the environment and contribute to its protection!

Warranty:

This product is guaranteed for 24 months. The warranty does not cover damages resulting from improper handling, accident, wear and tear, failure to follow the instruction manual or changes made to the product by a third party.